SUUNTO SI JSER GUIDE	PARTAN T	RAINER	WRIST H	IR 1.10

1. SA	4FETY	4
2. G	Setting started	5
	2.1. Buttons	6
	2.2. Optical heart rate	7
	2.3. Displays	7
	2.4. lcons	8
	2.5. Adjusting settings	10
3. Fe	eatures	12
	3.1. Activity monitoring	
	3.1.1. Instant HR	13
	3.1.2. Daily HR	
	3.2. Airplane mode	
	3.3. Altimeter	
	3.4. Autopause	
	3.5. Backlight	
	3.6. Button lock and screen dimming	
	3.7. Chest heart rate sensor	
	3.8. Device info	16
	3.9. Display theme	16
	3.10. Do Not Disturb mode	
	3.11. Feeling	17
	3.12. Find back	18
	3.13. FusedSpeed	18
	3.14. GPS accuracy and power saving	
	3.15. Interval training	
	3.16. Language and unit system	
	3.17. Logbook	21
	3.18. Movescount	21
	3.18.1. SuuntoLink	21
	3.18.2. Suunto Movescount App	22
	3.19. Notifications	22
	3.20. Pairing PODs and sensors	22
	3.20.1. Calibrating foot POD	23
	3.20.2. Calibrating power POD	23
	3.21. Points of interest	24
	3.21.1. Adding and deleting POIs	24
	3.21.2. Navigating to a POI	25
	3.21.3. POI types	26
	3.22. Position formats	27
	3.23. Recording an exercise	28

	3.23.1. Navigating during exercise	29
	3.23.2. Sport mode power saving options	30
	3.24. Recovery	30
	3.25. Routes	31
	3.25.1. Altitude navigation	31
	3.26. Sleep tracking	32
	3.27. Software updates	33
	3.28. Sport modes	33
	3.28.1. Swimming	34
	3.29. Stopwatch	34
	3.30. Time and date	35
	3.30.1. Alarm clock	35
	3.31. Tones and vibration	35
	3.32. Training insight	36
	3.32.1. Training plans	36
	3.33. Watch faces	37
4.	Care and support	38
	4.1. Handling guidelines	38
	4.2. Battery	38
	4.3. Disposal	38
5.	Reference	39
	5.1. Technical specifications	39
	5.2. Compliance	39
	5.2.1. CE	39
	5.2.2. FCC compliance	39
	5.2.3. IC	40
	5.2.4. NOM-121-SCT1-2009	40
	5.3. Trademark	40
	5.4. Patent notice	40
	5.5. International Limited Warranty	40
	5.6. Copyright	42

1. SAFETY

Types of safety precautions

WARNING: - is used in connection with a procedure or situation that may result in serious injury or death.

CAUTION: - is used in connection with a procedure or situation that will result in damage to the product.

NOTE: - is used to emphasize important information.

TIP: - is used for extra tips on how to utilize the features and functions of the device.

Safety precautions

WARNING: Allergic reactions or skin irritations may occur when the product is in contact with skin, even though our products comply with industry standards. In such event, stop use immediately and consult a doctor.

WARNING: Always consult your doctor before beginning an exercise program. Overexertion may cause serious injury.

A WARNING: Only for recreational use.

WARNING: Do not entirely rely on the GPS or battery lifetime of the product. Always use maps and other backup material to ensure your safety.

CAUTION: Do not apply solvent of any kind to the product, as it may damage the surface.

 \triangle **CAUTION:** Do not apply insect repellent on the product, as it may damage the surface.

CAUTION: Do not throw the product away, but treat it as electronic waste to preserve the environment.


 \triangle **CAUTION:** Do not knock or drop the product, as it may get damaged.

NOTE: At Suunto we use advanced sensors and algorithms to generate metrics that can help you in your activities and adventures. We strive to be as accurate as possible. However, none of the data our products and services collect is perfectly reliable, nor are the metrics they generate absolutely precise. Calories, heart rate, location, movement detection, shot recognition, physical stress indicators and other measurements may not match the real world. Suunto products and services are intended for recreational use only and are not meant for medical purposes of any kind.

2. Getting started

Starting your Suunto Spartan Trainer Wrist HR for the first time is quick and simple.

1. Connect the watch to a power source with the supplied USB cable to wake up the watch.

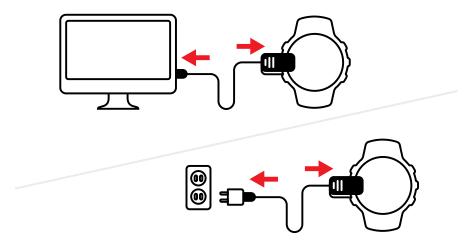

2. Disconnect the cable from the watch.



3. Press the middle button to begin the setup wizard.



4. Select your language by pressing the right top or right bottom button and confirm with the middle button.



5. Follow the wizard to complete initial settings. Press the upper right or lower right button to change values and press the middle button to select and go to the next step.

After completing the wizard, charge the watch with the supplied USB cable until the battery is fully charged.

 
You need to download and install SuuntoLink on your PC or Mac to get software updates for your watch. We strongly recommend updating your watch when a new software release is available.

Visit www.movescount.com/connect for further information.

NOTE: SuuntoLink also optimizes the GPS performance of your watch. You need to connect your watch to SuuntoLink regularly to ensure good GPS tracking.

2.1. Buttons

Suunto Spartan Trainer Wrist HR has five buttons you can use to navigate through displays and features.



1. Upper left button

- · press to activate backlight
- · press to view alternative information

2. Upper right button

• press to move up in views and menus

3. Middle button

- press to select an item or view alternate information
- keep pressed to open in-context shortcut menu

4. Lower left button

· press to go back

5. Lower right button

press to move down in views and menus

When you are recording an exercise, the buttons have different functions:

1. Upper left button

press to view alternative information

2. Upper right button

- press to pause or resume recording
- keep pressed to change activity

3. Middle button

- press to change displays
- · keep pressed to open in-context options menu

4. Lower left button

press to change displays

5. Lower right button

- press to mark a lap
- keep pressed to lock and unlock buttons

2.2. Optical heart rate

Optical heart rate measurement from the wrist is an easy and convenient way to track your heart rate. To get the best results, please keep in mind factors that may affect heart rate measurement:

- The watch must be worn directly against your skin. No clothing, however thin, can be between the sensor and your skin.
- The watch may need to be higher on your arm than where watches are normally worn. The sensor reads blood flow through tissue. The more tissue it can read, the better.
- Arm movements and flexing muscles, such as gripping a tennis racket, can change the accuracy of the sensor readings.
- When your heart rate is low, the sensor may not be able to provide stable readings. A short warm up of a few minutes before you start the recording helps.
- Dark skin and tattoos block light and prevent reliable readings from the optical sensor.
- The optical sensor may not provide accurate heart rate readings for swimming activities.
- For highest accuracy and quickest responses to changes in your heart rate, we recommend using a compatible chest heart rate sensor such as Suunto Smart Sensor.

WARNING: Optical heart rate sensor technology is currently not as accurate or reliable as measuring heart rate from the chest. Your actual heart rate may be higher or lower than the optical sensor reading.

2.3. Displays

Displays are customizable and subject to change with software updates. The basic arrangement remains, however, the same, as illustrated below.



- 1. Launcher
- 2. Watch face
- 3. Activity
- 4. Training
- 5. Recovery

2.4. Icons

Suunto Spartan Trainer Wrist HR uses the following icons:

	altitude
/ \	diutude
(3)	altitude difference
•	ascent
Ø	ascent time
<u> </u>	button lock
Θ	cadence
•	calories
Ø	current location (navigation)
553	charging
•	descent

0	descent time
•	distance
0	duration
~	exercise
\otimes	failure
Θ	flat time
1	GPS acquired
0	heart rate
•	HR sensor signal acquired
O	highest point
®	incoming call
	logbook
	low battery
Q	lowest point
•	message/notification
&	missed call
8	navigation
/	no ascents
₹	no descents
D	off route
@	pace
=	planned Move
D	POD signal acquired
6	Power POD signal acquired

PTE	Peak Training Effect
1	recovery time
	software update available
8	steps
Ö	stopwatch
8	stroke rate (swimming)
\bigcirc	success
(8)	syncing
(i)	settings

2.5. Adjusting settings

You can adjust all watch settings directly in the watch or through Suunto Movescount.

To adjust a setting:

1. Press the upper right button until you see the settings icon, then press the middle button to enter the settings menu.



2. Scroll through the settings menu by pressing the upper right or lower right buttons.



- 3. Select a setting by pressing the middle button when the setting is highlighted. Go back in the menu by pressing the lower left button.
- 4. For settings with a value range, change the value by pressing the upper right or lower right button.



5. For settings with just on or off, change the value by pressing the middle button.



TIP: You can also access general settings from the watch face by keeping the middle button to open the in- context menu.



3. Features

3.1. Activity monitoring

Your watch keeps track of your overall level of activity throughout the day. This is an important factor whether you just aim to be fit and healthy or you are training for an upcoming competition. It is good to be active, but when training hard, you need to have proper rest days with low activity.

The activity counter automatically resets at midnight every day. At the end of the week, the watch provides a summary of your activity.

From the watch face display, press the lower right button to see your total steps for the day.



Your watch counts steps using an accelerometer. The total step count accumulates 24/7, also while recording training sessions and other activities. However, with some specific sports, such as swimming and cycling, steps are not counted.

In addition to steps, you can press the upper left button to see estimated calories for the day.



The large number in the center of the display is the estimated amount of active calories you have burned so far. Below this you see the total calories burned. The total includes both active calories and your Basal Metabolic Rate (see below).

The ring in both displays indicates how close you are to your daily activity goals. These targets can be adjusted to your personal preferences (see below).

You can also check your activity over the last seven days by pressing the lower left button. Press the middle button to switch between steps and calories.



Activity goals

You can adjust your daily goals for both steps and calories. While in the activity display, keep the middle button pressed to open the activity goal settings.



When setting your steps goal, you define the total number of steps for the day.

The total calories you burn per day is based on two factors: your Basal Metabolic Rate (BMR) and your physical activity.



Your BMR is the amount of calories your body burns while at rest. These are the calories your body needs to stay warm and perform basic function like blink your eyes or beat your heart. This number is based on your personal profile, including factors such as age and gender.

When you set a calorie goal, you define how many calories you want to burn in addition to your BMR. These are your so-called active calories. The ring around the activity display advances according to how many active calories you burn during the day compared to your goal.

3.1.1. Instant HR

The instant HR display provides a quick snapshot of your heart rate. The display shows your heart rate over ten minutes as a graph, along with an estimation of your hourly calories consumption rate and your current heart rate.



To view instant HR:

- 1. From the watch face view, press the lower right button to scroll to the activity monitoring display.
- 2. Press the middle button to enter the instant HR display.
- 3. Press the upper button to exit the display and return to the watch face view.

3.1.2. Daily HR

The daily HR display provides a 12-hour view of your heart rate. This is a helpful source of information about, for example, your recovery after a hard training session.

The display shows your heart rate over 12 hours as a graph. The graph is plotted using your average heart rate based on 24-minute time slots. In addition, you get an estimation of your average hourly calorie consumption rate and your lowest heart rate during the 12- hour period.

Your minimum heart rate from the last 12 hours is a good indicator of your recovery state. If it is higher than normal, you probably are not fully recovered yet form your last training session.



If you record an exercise, the daily HR values reflect the elevated heart rate and calorie consumption from your training. But keep in mind that the graph and consumption rates are averages. If your heart rate peaks at 200 bpm while exercising, the graph does not show that maximum value, but rather the average from the 24 minutes when you hit that peak rate.

Before you can see the daily HR display, you need to activate the daily HR feature. You can toggle the feature on or off from the settings under **Activity**. If you are in the activity monitoring display, you can also access the activity settings by keeping the middle button pressed.

With the daily HR feature on, your watch activates the optical heart rate sensor on a regular basis to check your heart rate. This slightly increases battery power consumption.



Once activated, your watch needs 24 minutes before it can start display daily HR information. To view daily HR:

- 1. From the watch face view, press the lower right button to scroll to the activity monitoring display.
- 2. Press the middle button to enter the instant HR display and then press the middle button again to switch to the daily HR display.
- 3. Press the upper right button to exit the display and return to the watch face view.

NOTE: After a period of inactivity, such as when you are not wearing the watch or sleeping soundly, the watch goes into hibernation mode and turns off the optical heart rate sensor. If you want to get heart rate tracking during the night, activate Do Not Disturb mode (see 3.10. Do Not Disturb mode).

3.2. Airplane mode

Activate airplane mode when needed to turn off wireless transmissions. You can activate or deactivate airplane mode from the settings under **Connectivity**.



NOTE: To pair anything with your device, you need to first turn off airplane mode if you have it on.

3.3. Altimeter

Suunto Spartan Trainer Wrist HR uses GPS to measure altitude. Under optimal signal conditions, eliminating potential errors typical in calculating GPS position, the GPS altitude reading should give a pretty good indication of your elevation.

To get a more precise reading from GPS altitude, comparable to what you can get from barometric altitude, you need additional sources of data like a gyroscope or Doppler radar to adjust GPS altitude.

Because Suunto Spartan Trainer Wrist HR relies solely on GPS to measure altitude, if the GPS is not set for maximum accuracy, any filtering is subject to error and may result in potentially inaccurate altitude readings.

If you need good elevation readings, ensure your GPS accuracy is set to **Best** during the recording.

However, even with the best accuracy, GPS altitude should not be considered an absolute position. It is an estimation of your real elevation, and the accuracy of this estimation is heavily dependent on the surrounding conditions.

3.4. Autopause

Autopause pauses the recording of your exercise when your speed is less than 2 km/h (1.2 mph). When your speed increases to more than 3 km/h (1.9 mph), the recording continues automatically.

You can turn autopause on/off for each sport mode in Suunto Movescount. You can also turn on or off autopause from the sport mode settings in the watch before you start your exercise recording.

If autopause is on during a recording, a pop-up notifies you when the recording is paused automatically.



Press the middle button to check the current time and battery level.



You can let the recording resume automatically when you start moving again, or manually resume from the pop-up screen by pressing the upper right button.

3.5. Backlight

The backlight has two modes: automatic and toggle. In automatic mode, the backlight comes on with any button press. In toggle mode, you turn the backlight on by keeping the upper left button pressed. The backlight stays on until you keep the upper left button pressed again.

By default, the backlight is in automatic mode. You can change the backlight mode from the settings under **General** » **Backlight**.

3.6. Button lock and screen dimming

While recording an exercise you can lock the buttons by keeping the lower right button pressed. Once locked, you cannot change the display views, but you can turn on the backlight with any button press if the backlight is in automatic mode.

To unlock, keep the lower right button pressed again.

When you are not recording an exercise, the screen dims after a short period of inactivity. To activate the screen, press any button.

After a longer period of inactivity, the watch goes into hibernation mode and turns the screen off completely. Any movement reactivates the screen.

3.7. Chest heart rate sensor

You can use a Bluetooth[®] Smart compatible heart rate sensor, such as the Suunto Smart Sensor, with your Suunto Spartan Trainer Wrist HR to get accurate information about your exercise intensity.

If you use the Suunto Smart Sensor, you also have the added advantage of heart rate memory. The sensor memory function buffers data if the connection to your watch is interrupted, for example, when swimming (no transmission under water).

It also means you can even leave your watch behind after starting a recording. For more information, please refer to the Suunto Smart Sensor User Guide.

Refer to the user guide for Suunto Smart Sensor or other Bluetooth[®] Smart compatible heart rate sensor for additional information.

See 3.20. Pairing PODs and sensors for instructions on how to pair an HR sensor with your watch.

3.8. Device info

You can check details of your watch software and hardware from the settings under **General** » **About**.

3.9. Display theme

To increase the readability of your watch screen while exercising or navigating, you can change between light and dark themes.

With the light theme, the display background is light and the numbers dark.

With the dark theme, the contrast is reverse, with the background dark and the numbers light.

The theme is a global setting that you can change in your watch from any of your sport mode options or from the navigation settings.

To change display theme in sport mode options:

- 1. From the watch face, Press the upper right button to open the launcher.
- 2. Scroll to **Excercise** and or press the middle button.
- 3. Go to any sport mode and press the lower right button to open the sport mode options.
- 4. Scroll down to **Theme** and press the middle button.
- 5. Switch between Light and Dark by pressing the upper right and lower right buttons, and accept with the middle button.

6. Scroll back up to exit the sport mode options and start (or exit) the sport mode.

To change display theme in navigation settings:

- 1. Press the upper right button to open the launcher.
- 2. Scroll to **Navigation** and press the middle button.
- 3. Scroll down to Navigation settings as described above and the middle button.
- 4. Scroll down to **Theme** and press the middle button.
- 5. Switch between Light and Dark by pressing the upper right and lower right buttons and accept with the middle button.
- 6. Exit the navigation settings by keeping the middle button pressed.

3.10. Do Not Disturb mode

The Do Not Disturb mode is a setting that mutes all sounds and vibrations, making it a very useful option when wearing the watch in, for example, a theater or any environment where you want the watch to operate as usual, but silently.

The Do Not Disturb mode also prevents the watch from going into hibernation after a period of inactivity. So, you can enable this setting along with Daily HR (see 3.1.2. Daily HR) to get heart rate tracking 24/7.

To turn on the Do Not Disturb mode:

- 1. From the watch face, press the middle button to open the shortcuts menu.
- 2. Press the middle button to activate Do Not Disturb mode.

While in this mode, press any button to activate the screen. When the screen is on, press the upper right button to turn off the Do Not Disturb mode.

If you have an alarm set, it sounds as normal and disables Do Not Disturb mode unless you snooze the alarm.

3.11. Feeling

If you are training regularly, following how you feel after each session is an important indicator of your overall physical condition. A coach or personal trainer can also use your feeling trend to track your progress over time.

There are five degrees of feeling to choose from:

- Poor
- Average
- Good
- Very good
- Excellent

What these options mean exactly are up to you (and your coach) to decide. The important thing is that you use them consistently.

For each training session, you can record how you felt in the watch directly after stopping the recording by answering the '**How was it?**' question.




You can skip answering the question by pressing the middle button and instead add how you felt later by editing the Move in Suunto Movescount.

Once you start regularly using the feeling metric, you can quickly check your 7-day and 30-day trend from you timeline overview in Movescount.



For longer-term trend analysis, go to your Moves page. Select the time period you want to see from the calendar and scroll down to the Rest & Recovery section to see the feeling trend graph.

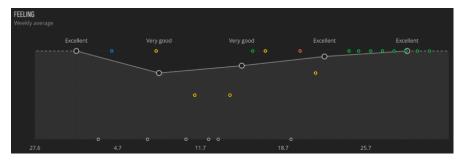

3.12. Find back

If you are using GPS when recording an activity, Suunto Spartan Trainer Wrist HR automatically saves the starting point of your exercise. With Find back, Suunto Spartan Trainer Wrist HR can guide you directly back to your starting point.


To start find back:

- 1. While you are recording an activity, press the middle button until you have reached the navigation display.
- 2. Press the lower right button to open the shortcut menu.
- 3. Scroll to Find back and press the middle button to select.
- 4. Press the lower left button to exit and return to the navigation display.


The navigation guidance is shown as the last display on the selected sport mode.

3.13. FusedSpeed

FusedSpeedTM is a unique combination of GPS and wrist acceleration sensor readings for measuring your running speed more accurately. The GPS signal is adaptively filtered based on wrist acceleration, giving more accurate readings at steady running speeds and a quicker responses to changes in speed.

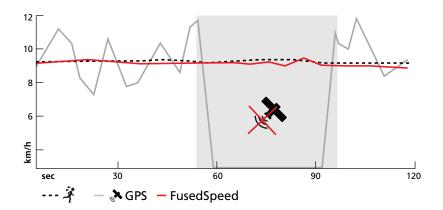

FusedSpeed benefits you the most when you need highly reactive speed readings during training, for example, when running on uneven terrain or during interval training. If you temporarily lose the GPS signal, for example, Suunto Spartan Trainer Wrist HR is able to continue showing accurate speed readings with the help of the GPS calibrated accelerometer.

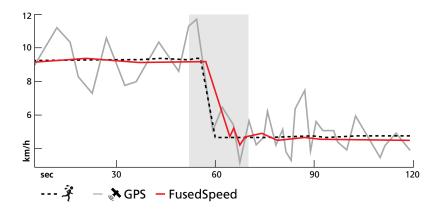

TIP: To get the most accurate readings with FusedSpeed, only glance shortly at the watch when needed. Holding the watch in front of you without moving it reduces the accuracy.

FusedSpeed is automatically enabled for running and other similar types of activities, such as orienteering, floor ball and football (soccer).

3.14. GPS accuracy and power saving

The GPS fix rate determines the accuracy of your track - the shorter the interval is between fixes, the better the track accuracy is. Each GPS fix is recorded in your log when recording an exercise.

The GPS fix rate also directly affects battery life. By reducing GPS accuracy, you can extend the battery life of your watch.

The GPS accuracy options are:

- Best: ~1 sec fix rate
- Good: ~ 20 sec fix rate
- OK: ~ 60 sec fix rate

You can change GPS accuracy from the sport options in your watch or under the advanced options for the sport mode on Suunto Movescount.

Whenever you navigate a route or a POI, the GPS accuracy is automatically set to Best.

NOTE: The first time you exercise or navigate with GPS, wait for the watch to acquire a GPS fix before starting. This may take 30 seconds or more depending on conditions.

3.15. Interval training

Interval workouts are a common form of training consisting of repetitive sets of high and low intensity efforts. With Suunto Spartan Trainer Wrist HR, you can define in the watch your own interval training for each sport mode.

When defining your intervals, you have four items to set:

- Intervals: on/off toggle that enables interval training. When you toggle this on, an interval training display is added to your sport mode.
- Repetitions: the number of interval + recovery sets you want to do.
- · Interval: the length of your high intensity interval, based on distance or duration.
- Recovery: the length of your rest period between intervals, based on distance or duration.

Keep in mind that if you use distance to define your intervals, you need to be in a sport mode that measures distance. The measurement can be based on GPS, or from a foot or bike POD, for example.

NOTE: If you are using intervals, you cannot activate navigation.

To train with intervals:

- 1. From the launcher, select your sport.
- 2. Before you start an exercise recording, press the lower right button to open the sport mode options.
- 3. Scroll down to **Intervals** and press the middle button.
- 4. Toggle intervals on and adjust the settings described above.



- 5. Scroll up to **Back** and confirm with the middle button.
- 6. Press the upper right button until you are back at the start view and start your exercise as normal.
- 7. Press the lower left button to change the view to intervals display and press the upper right button when you are ready to start your interval training.



8. If you want to stop the interval training before you have completed all your repetitions, keep the middle button pressed to open the sport mode options and toggle off **Intervals**.

NOTE: While you are in the intervals display, buttons work as normal, for example, pressing the upper right button pauses the exercise recording, not just the interval training.

After you have stopped your exercise recording, interval training is automatically toggled off for that sport mode. The other settings, however, are maintained so you can easily start the same workout the next time you use the sport mode.

3.16. Language and unit system

You can change your watch language and unit system from the settings under **General** » **Language**.

3.17. Logbook

You can access the logbook from the launcher.



Scroll through the log by pressing the upper right or lower right buttons. Press the middle button to open and view the entry of your choice.



NOTE: The log icon remains gray until the Move has been synced with Suunto Movescount.

To exit the log, press the lower left button.

3.18. Movescount

Suunto Movescount is a growing sports community where you can create your own sports diary to collect and share your activities as well as customize your watch.

If you haven't already, go to www.movescount.com and register. Once you have a user account, you can connect your watch with your account two ways:

- Computer: via USB cable using SuuntoLink
- Mobile device: over Bluetooth using Suunto Movescount App

3.18.1. SuuntoLink

Download and install SuuntoLink on your PC or Mac to sync your watch with Movescount, keep your GPS optimized, and update your watch software.

We strongly recommend updating your watch when a new software release is available.

Visit www.movescount.com/connect for further information.

3.18.2. Suunto Movescount App

With the Suunto Movescount App, you can further enrich your Suunto Spartan Trainer Wrist HR experience. Pair your watch with the mobile app to get notifications on your watch, change settings on the go, take pictures with data from your Move, and much more.

TIP: With any Move that is stored in Movescount, you can add pictures as well as create a Suunto Movie using the Suunto Movescount App.

NOTE: You cannot pair anything if airplane mode is on. Turn off airplane mode before pairing.

To pair your watch with Suunto Movescount App:

- Ensure your watch Bluetooth is on. Under the settings menu, go to Connectivity »
 Discovery and enable it if it is not already.
- 2. Download and install Suunto Movescount App on your compatible mobile device from the iTunes App Store, Google Play in addition to several popular app stores in China.
- 3. Start Suunto Movescount App and turn on Bluetooth if it is not on already.
- 4. Tap the settings icon in the upper-right of the app screen and then tap the "+" icon to pair your watch.

NOTE: Some features require an internet connection over Wi-Fi or mobile network. Carrier data connection fees may apply.

3.19. Notifications

If you have paired your watch with the Suunto Movescount App, you can get notifications such as in-coming calls and text messages on your watch.

When you pair your watch with the app, notifications are on by default. You can turn them off from the settings under **Notifications**.

When a notification arrives, a pop-up appears on the watch face.



If the message doesn't fit on the screen, press the lower right button to scroll through the full text.

3.20. Pairing PODs and sensors

Pair your watch with Bluetooth Smart PODs and sensors to collect additional information, such as cycling power, when recording an exercise.

Suunto Spartan Trainer Wrist HR supports the following types of PODs and sensors:

- Heart rate
- Bike

- Power
- Foot

NOTE: You cannot pair anything if airplane mode is on. Turn off airplane mode before pairing. See 3.2. Airplane mode.

To pair a POD or sensor:

- 1. Go to your watch settings and select **Connectivity**.
- 2. Select **Pair sensor** to get the list of sensor types.
- 3. Press the lower right button to scroll through the list and select the sensor type with the middle button.



4. Follow the instructions in the watch to complete pairing (refer to sensor or POD manual if needed), pressing the middle button to advance to the next step.



If the POD has required settings, such as crank length for a power POD, you are prompted to enter a value during the pairing process.

Once the POD or sensor is paired, your watch searches for it as soon as you select a sport mode that uses that sensor type.

You can see the full list of paired devices in your watch from the settings under **Connectivity** » **Paired devices**.

From this list, you can remove (unpair) the device if needed. Select the device you want to remove, and tap **Forget**.

3.20.1. Calibrating foot POD

If you have paired a foot POD, your watch automatically calibrates the POD using GPS.

For the first calibration, you should select a sport mode where the foot POD is used and the GPS accuracy is set to **Best**. Start the recording and run at a steady pace on a level surface, if possible, for at least 15 minutes.

Run at your normal average pace for the initial calibration, and then stop the exercise recording. The next time you use the foot POD, the calibration is ready.

Your watch automatically re-calibrates the foot POD as needed whenever GPS speed is available.

3.20.2. Calibrating power POD

For power PODs (power meters), you need to initiate the calibration from the sport mode options in your watch.

To calibrate a power POD:

- 1. Pair a power POD with your watch if you have not done so already.
- 2. Select a sport mode that uses a power POD and then open the mode options.
- 3. Select **Calibrate power POD** and follow the instructions in the watch.

Once calibrated, you can check the last calibrated date from the options whenever you use the sport mode. You should re-calibrate the power POD from time to time.

3.21. Points of interest

A point of interest, or POI, is a special location, such as camping spot or vista along a trail, you can save and navigate to later. You can create POIs in Suunto Movescount or in your watch by saving your current location.

Each POI is defined by:

- POI name
- POI type
- · Date and time created
- Latitude
- · Longitude
- Elevation

You can store up to 250 POIs in your watch.

3.21.1. Adding and deleting POIs

You can add a POI to your watch either with Suunto Movescount or by saving your current location in the watch.

To add a POI with Suunto Movescount:

- 1. Go to your watch settings on the Suunto Movescount website.
- 2. Expand the NAVIGATION section and then POIS (POINTS OF INTEREST).
- 3. Click **Create new point of interest** and fill in your POI details. Use the map to enter latitude and longitude.
- 4. Save the POI and then add it to your watch by selecting **Use in watch**.
- 5. Sync your watch with Movescount using SuuntoLink (USB cable) or Suunto Movescount App (Bluetooth).

If you are outside with your watch and come across a spot you want to save as a POI, you can add the location directly in your watch. The POI is added to your list of POIs in the watch and will be added to your POI list in Movescount the next time you sync.

To add a POI with your watch:

- 1. Press the upper right button to open the launcher.
- 2. Scroll to **Navigation** and tap on the icon or press the middle button.
- 3. Press the lower right button to scroll down to **Your location** and press the middle button.
- 4. Wait for the watch to activate GPS and find your location.
- 5. When the watch displays your latitude and longitude, press the upper right button to save your location as a POI and select the POI type.
- 6. By default the POI name is the same as the POI type (with a running number after it). You can edit the name later in Movescount.

Deleting POIs

You can remove a POI from you watch either by deactivating the Use in watch setting for the POI in Movescount or by deleting the POI from the POI list in the watch.

To delete a POI in your watch:

- 1. Press the upper right button to open the launcher.
- 2. Scroll to **Navigation** and press the middle button.
- 3. Press the lower right button to scroll down to **POIs** and press the middle button.
- 4. Scroll to the POI you want to remove from the watch and press the middle button.
- 5. Scroll to the end of the details and select **Delete**.

When you delete a POI from your watch, the POI is not permanently deleted. The next time you sync your watch with Movescount, the POI you deleted is deactivated.

To permanently delete a POI, you need to delete the POI in Movescount.

To permanently delete a POI:

- 1. Go to your watch settings in Movescount.
- 2. Expand the NAVIGATION section and then POIS (POINTS OF INTEREST).
- 3. Scroll to the POI you want to delete and click on the trash bin icon.
- 4. Sync your watch with Movescount using SuuntoLink (USB cable) or Suunto Movescount App (Bluetooth) to also remove the POI from your watch POI list.

3.21.2. Navigating to a POI

You can navigate to any POI that is in your watch POI list.

NOTE: When navigating to a POI, your watch uses full power GPS.

To navigate to a POI:

- 1. Press the upper right button to open the launcher.
- 2. Scroll to **Navigation** and press the middle button.
- 3. Scroll to POIs and press the middle button to open your list of POIs.
- 4. Scroll to the POI you want to navigate to and press the middle button.
- 5. Press the upper button to start navigating.

To stop navigating, press the upper button again at any time.

While you are moving, the POI navigation has two views:

POI view with direction indicator and distance to the POI



 map view showing your current location relative to the POI and your breadcrumb trail (the track you have traveled)



Press the middle button to switch between views. If you stop moving, the watch cannot determine which direction you are going based on GPS.

TIP: While in the POI view, press the upper left button to check battery level, time of day and altitude difference (between current position and POI).

In the map view, other POIs nearby are shown in gray. Press the upper left button to switch between the overview map and a more detailed view. In the detailed view, you adjust the zoom level by pressing the middle button and then zooming in and out with the upper and lower buttons.

While navigating, press the lower right button to open a list of shortcuts. The shortcuts give you quick access to navigation actions such as saving your current location or selecting another POI to navigate to.

3.21.3. POI types

The following POI types are available in Suunto Spartan Trainer Wrist HR:

0	generic point of interest
₽	Bedding (animal, for hunting)
0	Begin (start of a route or trail)
8	Big game (animal, for hunting)
0	Bird (animal, for hunting)
0	Building, home
8	Cafe, food, restaurant
•	Camp, camping
a	Car, parking
0	Cave
•	Cliff, hill, mountain, valley
	Coast, lake, river, water
8	Crossroad

•	Emergency
A	End (end of a route or trail)
0	Fish, fishing spot
0	Forest
6	Geogache
	Hostel, hotel, lodging
0	Info
•	Meadow
8	Peak
8	Prints (animal tracks, for hunting)
0	Road
•	Rock
®	Rub (animal marking, for hunting)
0	Scrape (animal marking, for hunting)
•	Shot (for hunting)
0	Sight
0	Small game (animal, for hunting)
6	Stand (for hunting)
3	Trail
0	Trail cam (for hunting)
	Waterfall

3.22. Position formats

The position format is the way your GPS position is displayed on the watch. All the formats relate to the same location, they only express it in a different way.

You can change the position format in the watch settings under **Navigation** » **Position format**.

Latitude/longitude is the most commonly used grid and has three different formats:

- WGS84 Hd.d°
- WGS84 Hd°m.m¹
- WGS84 Hd°m's.s

Other common position formats available include:

- UTM (Universal Transverse Mercator) gives a two-dimensional horizontal position presentation.
- MGRS (Military Grid Reference System) is an extension of UTM and consists of a grid zone designator, 100,000-meter square identifier and a numerical location.

Suunto Spartan Trainer Wrist HR also supports the following local position formats:

- BNG (British)
- ETRS-TM35FIN (Finnish)
- KKJ (Finnish)
- IG (Irish)
- RT90 (Swedish)
- SWEREF 99 TM (Swedish)
- CH1903 (Swiss)
- UTM NAD27 (Alaska)
- UTM NAD27 Conus
- UTM NAD83
- NZTM2000 (New Zealand)

NOTE: Some position formats cannot be used in the areas north of 84° and south of 80°, or outside the countries that they are intended for. If you are outside the allowed area, your location coordinates cannot be displayed on the watch.

3.23. Recording an exercise

In addition to 24/7 activity monitoring, you can use your watch to record your training sessions or other activities to get detailed feedback and follow your progress.

To record an exercise:

- 1. Put on heart rate sensor (optional).
- 2. Press the upper right button to open the launcher.
- 3. Scroll up to the exercise icon and select with the middle button.



- 4. Press upper right or lower right button to scroll through the sport modes and press the middle button to select the one you want to use.
- 5. Above the start indicator, a set of icons appear, depending on what you are using with the sport mode (such as heart rate, GPS and foot POD). These flash gray while searching and turn green once a signal is found. You can wait for each icon to turn green or start the recording as soon as you like by pressing the middle button.



- 6. While recording, you can switch between displays with the middle button.
- 7. Press the upper right button to pause the recording. Stop and save with the lower right button or continue resume with the upper right button.



If the sport mode you selected has options, such as setting a duration target, you can adjust them before starting the recording by pressing the lower right button. You can also adjust sport mode options while recording by keeping the middle button pressed.



If you are using a multisport mode, switch sports by keeping the upper right button pressed.

After you stop the recording, you are asked how you felt. You can answer or skip the question (see (*Feeling*). Then you get a summary of the activity that you can browse through with the upper or lower right buttons.

If you made a recording you don't want to keep, you can delete the log by scrolling down to **Delete** and confirm with the middle button. You can also delete logs in the same way from the logbook.



3.23.1. Navigating during exercise

You can navigate a route or to a POI while you are recording an exercise.

The sport mode you are using needs to have GPS enabled to be able to access the navigation options. If the sport mode GPS accuracy is OK or Good, when you select a route or POI, the GPS accuracy is changed to Best.

To navigate during exercise:

- 1. Create a route or POI in Suunto Movescount and sync your watch if you haven't done so already.
- 2. Select a sport mode that uses GPS and press the lower right button to open the options.
- 3. Scroll to **Navigation** and press the middle button.
- 4. Scroll through the navigation options and select one with the middle button.
- 5. Select the route or POI you want to navigate and press the middle button.

6. Press the upper right button. This step takes you back to the sport mode options. Scroll up to the start view and start your recording as normal.

While exercising, press the middle button to scroll to the navigation display where you will see the route or POI that you selected. For more information on the navigation display, see 3.21.2. Navigating to a POI and 3.25. Routes.

While in this display you can press the lower button to open your navigation options. From the navigation options, you can, for example, select a different route or POI, check your current location coordinates, as well as end navigation by selecting **Breadcrumb**.

3.23.2. Sport mode power saving options

To extend battery life while using sport modes with GPS, your biggest gains come from adjusting GPS accuracy (see *3.14*. *GPS accuracy and power saving*). To extend battery life further, you can adjust use the following power saving options:

• Display timeout: normally, the display is always on during your exercise. When you turn on the display timeout, the display turns off after 10 seconds to save battery power. Press any button to turn the display back on.

To activate power saving options:

- 1. Before you start an exercise recording, press the lower button to open the sport mode options.
- 2. Scroll down to **Power saving** and press the middle button.
- 3. Adjust the power saving options as you want and keep the middle button pressed to exit the power saving options.
- 4. Scroll back up to the start view and start your exercise as normal.

NOTE: If the display timeout is on, you can still get mobile notifications as well as sound and vibration alerts. Other visual aids such as the autopause pop-up are not shown.

3.24. Recovery

Recovery time is an estimate in hours of how long your body needs to recuperate after training. The time is based on the duration and intensity of the training session, as well as your overall fatigue.

Recovery time accumulates from all types of exercise. In other words, you accumulate recovery time on long, low intensity training session as well as at high intensity.

The time is cumulative across training sessions, so if you train again before the time has expired, the newly accumulated time is added to the remainder from your previous training session.

To view your recovery time, from the watch face, press the lower right button until you see the recovery display.



Because recovery time is an estimation only, the accumulated hours count down steadily regardless of your fitness level or other individual factors. If you are very fit, you may recover

faster than estimated. On the other hand, if you have the flu, for example, your recovery may be slower than estimated.

3.25. Routes

You can use your Suunto Spartan Trainer Wrist HR to navigate routes. Plan your route in Suunto Movescount and transfer it to your watch with the next sync.

To navigate on a route:

- 1. Press the upper right button to open the launcher.
- 2. Scroll to **Navigation** and press the middle button.



3. Scroll to **Routes** and press the middle button to open your list of routes.



- 4. Scroll to the route you want to navigate to and press the middle button.
- 5. Press the upper right button to start navigating.
- 6. Press the upper right button again at any time to stop navigating.



In the detailed view, zoom in and out by keeping the middle button pressed. Adjust the zoom level with the upper right and lower right buttons.



While you are in the navigation display, you can press the lower button to open a list of shortcuts. The shortcuts give you quick access to navigation actions such as saving your current location or selecting another route to navigate.

All sport modes with GPS also have a route selection option. See 3.23.1. Navigating during exercise.

3.25.1. Altitude navigation

If you are navigating a route that has altitude information, you can also navigate based on ascent and descent using the altitude profile display. While in the main navigation display (where you see your route), press the middle button to switch to the altitude profile display.

The altitude profile display shows you the following information:

- top: your current altitude
- center: altitude profile showing your current position
- bottom: remaining ascent or descent (press the upper left button to change views)



If you stray too far off from the route while using altitude navigation, your watch will give you an **Off route** message in the altitude profile display. If you see this message, scroll to the route navigation display to get back on track before continuing with altitude navigation.

3.26. Sleep tracking

A good night's sleep is important for a healthy mind and body. You can use your watch to track your sleep and follow how much sleep you are getting on average.

When you wear your watch to bed, Suunto Spartan Trainer Wrist HR tracks your sleep based on accelerometer data. You can leave the watch next to your bed when going to sleep, but we recommend leaving it on so that you can get more accurate sleep feedback.

To track sleep:

- 1. Go to your watch settings, scroll down to **SLEEP** and press the middle button.
- 2. Toggle on **SLEEP TRACKING**.



3. Set the times for going to bed and waking up according to your normal sleep schedule.

The last step defines your bedtime. Your watch uses that period to determine when you are sleeping (during your bedtime) and reporting all sleep as one session. If you get up for a drink of water during the night, for example, your watch still counts any sleep after that as the same session.

NOTE: If you go to bed before your bedtime and also wake up after your bedtime, your watch does not count that as a sleep session. You should set your bedtime according to the earliest you may go to bed and the latest you may wake up.

Once you have enabled sleep tracking, you can also set your sleep target. A typical adult needs between 7 and 9 hours of sleep per day, though your ideal amount of sleep may vary from the norms.

Sleep trends

When you wake up, you are greeted with a summary of your sleep. The summary includes, for example, the total duration of your sleep, as well as the estimated time you were awake (moving around) and the time you were in deep sleep (no movement).

In addition to the sleep summary, you can follow your overall sleep trend with the sleep insight. From the watch face, press the lower right button until you see the **SLEEP** display. The first view shows your last sleep compared to your sleep target.



While in the sleep display you can press the lower left button to see your average sleep over the last seven days.

From the **SLEEP** display, you can keep the middle button pressed to access sleep tracking settings and the latest sleep summary.

NOTE: All sleep measurements are based on movement only, so they are estimates that may not reflect your actual sleep habits.

Measuring heart rate while sleeping

If you wear your watch during the night, you can get additional feedback on your heart rate while sleeping. To keep the optical heart rate on during the night, ensure that Daily HR is enabled (see 3.1.2. Daily HR) and Do Not Disturb mode is activated (see 3.10. Do Not Disturb mode).

Automatic Do Not Disturb mode

You can use the auto Do Not Disturb setting to automatically enable Do Not Distrub mode while you sleep.

3.27. Software updates

Software updates for your watch bring new features and important improvements. We strongly recommend updating your watch as soon as an update is available.

If an update is available, you are notified via SuuntoLink as well as the Suunto Movescount App.

To update your watch software:

- 1. Plug your watch into the computer with the supplied USB cable.
- 2. Start SuuntoLink if it is not already running.
- 3. Click the update button in SuuntoLink.

3.28. Sport modes

Your watch comes with a wide range of pre-defined sport modes. The modes are designed for specific activities and purposes, from a casual walk outside to a triathlon race.

When you record an exercise (see 3.23. Recording an exercise), you can scroll up and down to see the short list of sport modes. Press the middle button by the icon at the end of the short list to view the complete list and see all sport modes.

Each sport mode has a unique set of displays and views. You can read more about each mode in Suunto Movescount under your watch settings. You can also shorten the list of modes in your watch through Movescount.

3.28.1. Swimming

You can use your Suunto Spartan Trainer Wrist HR for swimming in pools or openwater.

When you use a pool swimming sport mode, the watch relies on the pool length to determine distance. You can change the pool length as needed under the sport mode options before you start swimming

Openwater swimming relies on GPS to calculate distance. Because GPS signals do not travel under water, the watch needs to come out of the water periodically, such as with the freestyle stroke, to get a GPS fix.

These are challenging conditions for GPS, so it is important that you have a strong GPS signal before you jump in the water. To ensure good GPS, you should:

- Sync your watch with Movescount before you go swimming to optimize your GPS with the latest satellite orbit data.
- After you select an openwater swimming sport mode and a GPS signal is acquired, wait at least three minutes before starting your swim. This gives the GPS time to establish strong positioning.

3.29. Stopwatch

Your watch includes a stopwatch for basic time measurement. Press the upper right button to scroll up until you see the stopwatch icon. Select with the middle button.



Start the stopwatch by pressing the upper right button.



Stop the stopwatch by pressing the upper right button. You can resume by pressing the upper right button again. To reset the stopwatch, press the lower right button.

To reset the stopwatch, press the lower right button.



Exit the stopwatch by keeping the middle button pressed.

3.30. Time and date

You set time and date during the initial startup of your watch. After this, your watch uses GPS time to correct any offset.

You can manually adjust time and date from the settings under **GENERAL** » **Time/date** where you can also change time and date formats.

In addition to the main time, you can use dual time to follow the time at a different location, for example, when you are traveling. Under **General** » **Time/date**, tap **Dual time** to set the time zone by selecting a location.

3.30.1. Alarm clock

Your watch has an alarm clock that can sound once or repeat on specific days. Activate the alarm from the settings under **General** » **Time/date** » **Alarm**.

To set an alarm:

- 1. First select how often you want the alarm to sound. The options are:
 - Once: alarm sounds once in the next 24 hours at the set time
 - Weekdays: alarm sounds at the same time Monday thru Friday
 - Daily: alarm sounds at the same time every day of the week



2. Set the hour and minutes and then exit the settings.



When the alarm sounds, you can dismiss it to end the alarm, or you can select the snooze option. The snooze time is 10 minutes and can be repeated up to 10 times.



If you let the alarm continue to sound, it will automatically snooze after 30 seconds.

3.31. Tones and vibration

Tones and vibration alerts are used for notifications, alarms and other key events and actions. Both can be adjusted from the settings under **General** » **Tones**.

For each, you can select from the following options:

- All on: all events trigger an alert
- All off: no events trigger alerts

• Buttons off: all events other than pushing buttons trigger alerts

3.32. Training insight

Your watch provides an overview of your training activity over the last 30 days.

Press the lower right button to see your training totals.



Press the upper left button to toggle between total time and total distance.



From the totals view you can press the lower right button to see summaries of your top four sports. The summary includes total time, distance and calories for each sport.



Press the upper right button to see the next sport summary.



3.32.1. Training plans

In Suunto Movescount, you can make training programs for yourself by creating a totally new program or using an existing program made by other members.

When you have planned Moves, your watch will show what's coming next after you have synced with Movescount.

To see your next planned training sessions:

1. Press the lower right button to scroll to the training insight view.



2. Then press the middle button to view your next planned training session.



3. Press the middle button to see additional planned sessions.



4. Press the lower left button to exit the planned training views and return to the time display.

If you have a planned Moved scheduled for the current day, that Move appears as the first option in the sport mode list when you enter the launcher to start an exercise recording. Start the planned Move as you would a normal recording.

3.33. Watch faces

Suunto Spartan Trainer Wrist HR comes with several watch faces to choose from, both digital and analog styles.

To change the watch face:

1. Go to the **Watch face** setting from the launcher or keep the middle button pressed to open the in-context menu. Press the middle button to select **Watch face**



- 2. Use the upper right or lower right buttons to scroll through the watch face previews and select the one you want to use by pressing the middle button.
- 3. Use the upper right or lower right buttons to scroll through the color options and select the one you want to use.



Each watch face has additional information, such as date or dual time. Press the middle button to switch between views.

4. Care and support

4.1. Handling guidelines

Handle the unit with care – do not knock or drop it.

Under normal circumstances, the watch does not require servicing. On a regular basis, rinse it with fresh water, mild soap, and carefully clean the housing with a moist, soft cloth or chamois.

Use only original Suunto accessories - damage caused by non-original accessories is not covered by warranty.

4.2. Battery

The duration on a single charge depends on how you use your watch and in what conditions. Low temperatures, for example, reduce the duration of a single charge. In general, the capacity of rechargeable batteries decreases over time.

NOTE: In case of abnormal capacity decrease due to defective battery, Suunto covers battery replacement for one year or maximum 300 charging times, whichever comes first.

When the battery charge level is less than 10%, your watch displays a low battery icon. If the charge level gets very low, your watch goes into a low power mode and display a charge icon.



Use the supplied USB cable to charge your watch. Once the battery level is high enough, the watch wakes up from lower power mode.

WARNING: Only charge you watch using USB adapters that comply with the IEC 60950-1 standard for limited power supply. Using non-compliant adapters may damage your watch or cause a fire.

4.3. Disposal

Please dispose of the device in an appropriate way, treating it as electronic waste. Do not throw it in the garbage. If you wish, you may return the device to your nearest Suunto dealer.



5. Reference

5.1. Technical specifications

General

- Operating temperature: -20° C to +60° C (-5° F to +140° F)
- Battery charging temperature: 0° C to +35° C (+32° F to +95° F)
- Storage temperature: -30° C to +60° C (-22° F to +140° F)
- Weight: 53 g / 1.9 oz (metal bezel 66 g / 2.3 oz)
- Water resistance: 50 m (164 ft)
- Glass: acrylic (mineral crystal in metal bezel variants)
- · Battery: rechargeable lithium-ion battery
- Battery life: up to 40 hours with GPS, depending on conditions

Optical sensor

Optical heart rate by Valencell

Radio transreceiver

- Bluetooth Smart compatible
- Frequency band: 2402-2480 MHz
- Maximum output power: <4 dBm
- Range: ~3 m/9.8 ft

GPS

- · Technology: MediaTek
- Frequency band: 1575.42 MHz

5.2. Compliance

5.2.1. CE

Hereby, Suunto Oy, declares that the radio equipment type OW163 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.suunto.com/EUconformity.

5.2.2. FCC compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. This product has been tested to comply with FCC standards and is intended for home or office use.

Changes or modifications not expressly approved by Suunto could void your authority to operate this device under FCC regulations.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

5.2.3. IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

5.2.4. NOM-121-SCT1-2009

The operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation of the equipment or device.

5.3. Trademark

Suunto Spartan Trainer Wrist HR, its logos, and other Suunto brand trademarks and made names are registered or unregistered trademarks of Suunto Oy. All rights are reserved.

5.4. Patent notice

This product is protected by patents and pending patent applications and their corresponding national rights. For a list of the current patents, visit:

www.suunto.com/patents

www.valencell.com/patents

Additional patent applications have been filed.

5.5. International Limited Warranty

Suunto warrants that during the Warranty Period Suunto or a Suunto Authorized Service Center (hereinafter Service Center) will, at its sole discretion, remedy defects in materials or workmanship free of charge either by a) repairing, or b) replacing, or c) refunding, subject to the terms and conditions of this International Limited Warranty. This International Limited Warranty is valid and enforceable regardless of the country of purchase. The International Limited Warranty does not affect your legal rights, granted under mandatory national law applicable to the sale of consumer goods.

Warranty Period

The International Limited Warranty Period starts at the date of original retail purchase.

The Warranty Period is two (2) years for Products and Dive wireless transmitters unless otherwise specified.

The Warranty Period is one (1) year for accessories including but not limited to wireless sensors and transmitters, chargers, cables, rechargeable batteries, straps, bracelets and hoses.

Exclusions and Limitations

This International Limited Warranty does not cover:

- a. normal wear and tear such as scratches, abrasions, or alteration of the color and/or material of non-metallic straps, b) defects caused by rough handling, or c) defects or damage resulting from use contrary to intended or recommended use, improper care, negligence, and accidents such as dropping or crushing;
- 2. printed materials and packaging;
- 3. defects or alleged defects caused by use with any product, accessory, software and/or service not manufactured or supplied by Suunto;
- 4. non-rechargeable batteries.

Suunto does not warrant that the operation of the Product or accessory will be uninterrupted or error free, or that the Product or accessory will work with any hardware or software provided by a third party.

This International Limited Warranty is not enforceable if the Product or accessory:

- 1. has been opened beyond intended use;
- 2. has been repaired using unauthorized spare parts; modified or repaired by unauthorized Service Center;
- 3. serial number has been removed, altered or made illegible in any way, as determined at the sole discretion of Suunto; or
- 4. has been exposed to chemicals including but not limited to sunscreen and mosquito repellents.

Access to Suunto warranty service

You must provide proof of purchase to access Suunto warranty service. You must also register your product online at www.suunto.com/mysuunto to receive international warranty services globally. For instructions how to obtain warranty service, visit www.suunto.com/warranty, contact your local authorized Suunto retailer, or call Suunto Contact Center.

Limitation of Liability

To the maximum extent permitted by applicable mandatory laws, this International Limited Warranty is your sole and exclusive remedy and is in lieu of all other warranties, expressed or implied. Suunto shall not be liable for special, incidental, punitive or consequential damages, including but not limited to loss of anticipated benefits, loss of data, loss of use, cost of capital, cost of any substitute equipment or facilities, claims of third parties, damage to property resulting from the purchase or use of the item or arising from breach of the warranty, breach of contract, negligence, strict tort, or any legal or equitable theory, even if Suunto knew of the likelihood of such damages. Suunto shall not be liable for delay in rendering warranty service.

5.6. Copyright

© Suunto Oy 10/2016. All rights reserved. Suunto, Suunto product names, their logos and other Suunto brand trademarks and names are registered or unregistered trademarks of Suunto Oy. This document and its contents are proprietary to Suunto Oy and are intended solely for the use of clients to obtain knowledge and information regarding the operation of Suunto products. Its contents shall not be used or distributed for any other purpose and/or otherwise communicated, disclosed or reproduced without the prior written consent of Suunto Oy. While we have taken great care to ensure that information contained in this documentation is both comprehensive and accurate, no warranty of accuracy is expressed or implied. This document content is subject to change at any time without notice. The latest version of this documentation can be downloaded at www.suunto.com.



1. www.suunto.com/support www.suunto.com/mysuunto

2.	AUSTRALIA (24/7)	+61 1800 240 498
	AUSTRIA	+43 720 883 104
	CANADA (24/7)	+1 855 624 9080
	CHINA	+86 400 661 1646
	CHINA - Hong Kong	+852 58060687
	FINLAND	+358 9 4245 0127
	FRANCE	+33 4 81 68 09 26
	GERMANY	+49 89 3803 8778
	ITALY	+39 02 9475 1965
	JAPAN	+81 3 4520 9417
	NETHERLANDS	+31 1 0713 7269
	NEW ZEALAND (24/7)	+64 9887 5223
	RUSSIA	+7 499 918 7148
	SPAIN	+34 91 11 43 175
	SWEDEN	+46 8 5250 0730
	SWITZERLAND	+41 44 580 9988
	UK (24/7)	+44 20 3608 0534
	USA (24/7)	+1 855 258 0900

© Suunto Oy

Suunto is a registered trademark of Suunto Oy. All Rights reserved.